
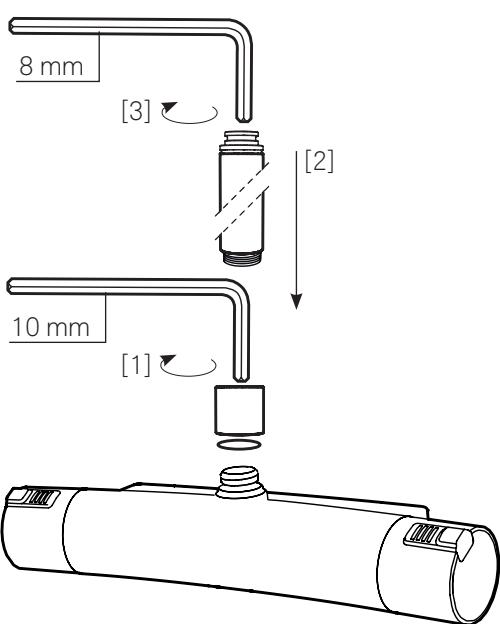
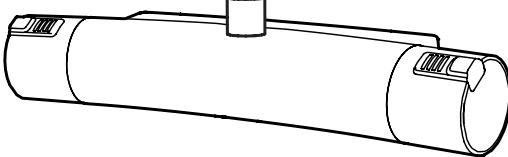
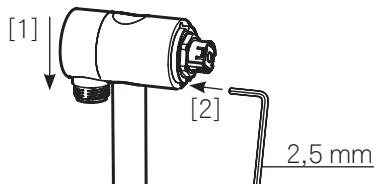
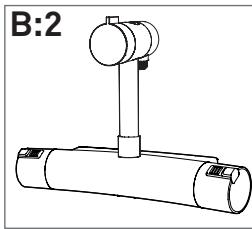
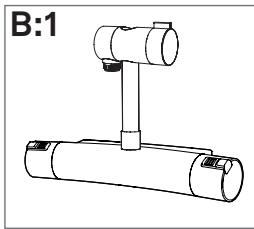
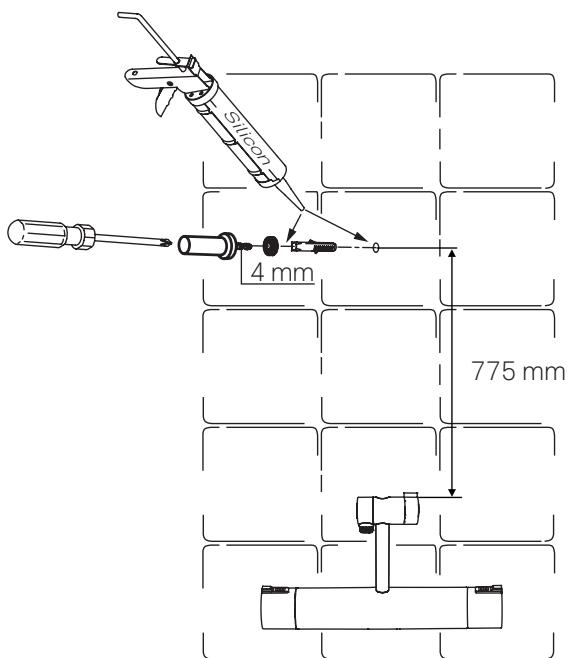
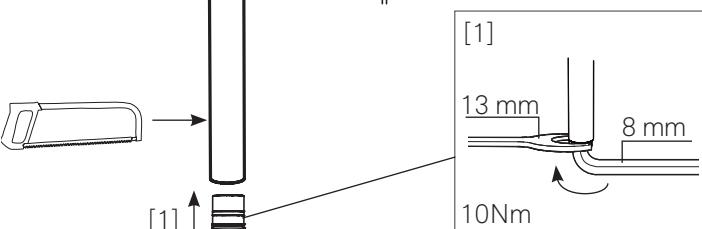
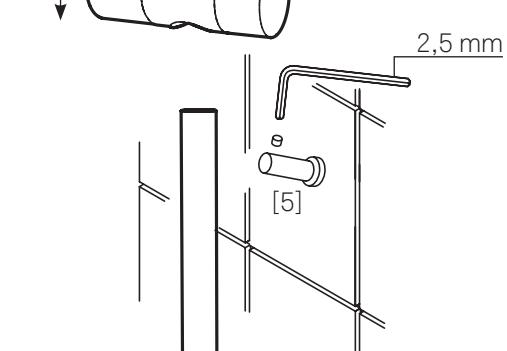
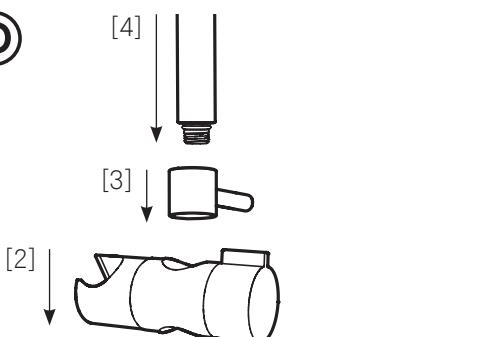
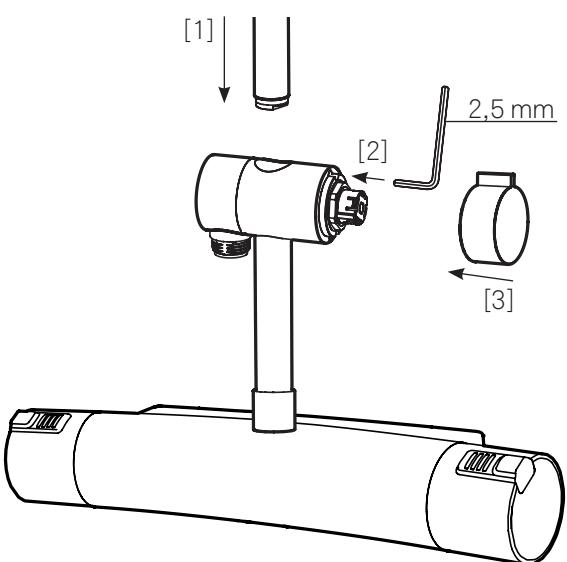
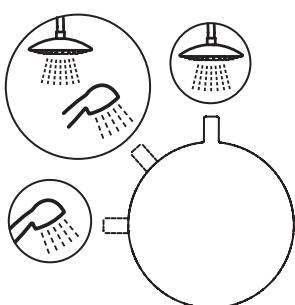
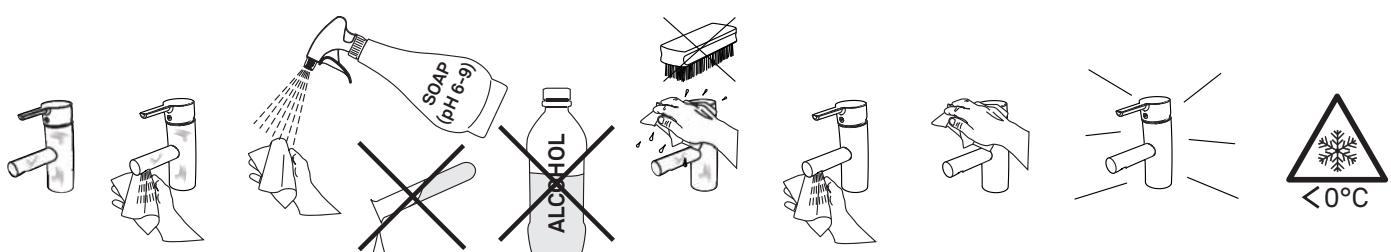


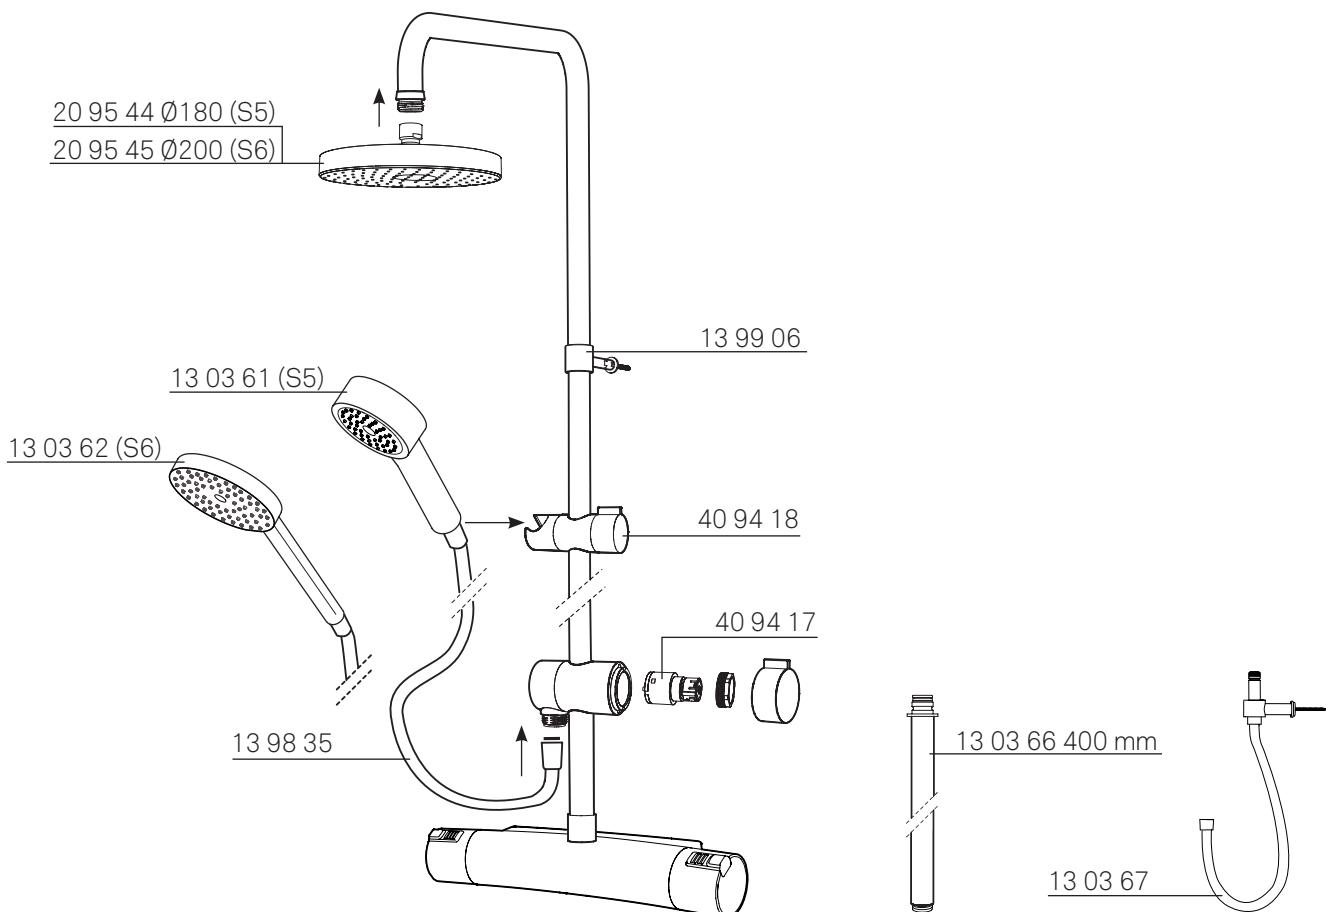

Denna produkt är anpassad till  
Branschregler Säker Vatteninstallation.  
Mora Armatur garanterar produkternas  
funktion om branschreglerna och  
produkternas monteringsanvisning följs.

**A****B****C****D****E****F**

**SVENSKA****MONTERING**

- A** Drag fast övergångskoppling [1]. Montera korta röret på blandaren [2]. Drag fast röret [3].
- B** Tryck fast omkastaren [1]. Lås den i önskad position genom att dra åt låsskruven [2].
- C** Borra hål i vägg 775 mm över omkastaren och montera väggkonsoll. Om röret kapas, grada rörändan och anpassa måttet så hålet hamnar i skarven mellan långa röret och taksilsrören.
- OBS:** Täta med silikon.
- D** Tryck in expansionskoppling, håll den fixerad och dra åt med insexfyckel 8 mm [1]. Trä över gliddel [2]. För att förstå vredets position på gliddelen i fast läge dra åt den, om nedåt vänd på gliddel. Trä över väggfäste [3]. Skruva fast taksilsrör [4]. Montera rör på väggkonsoll [5].
- E** Tryck in överrör i omkastaren [1]. Lås med låsskruv [2]. Tryck fast vredet [3] på omkastaren.

Ett visst efterdropp kan förekomma. För att minska efterdroppet kan omkastaren efter dusch lämnas i mellanläge (45°).

**Uttjänta produkter kan återlämnas till Mora Armatur för återvinning.**

**ENGLISH****ASSEMBLY**

- A** Tighten the adapter [1]. Fit the short pipe to the mixer [2]. Tighten the pipe [3].
- B** Slide on the diverter [1]. Lock it in the desired position by tightening the locking screw [2].
- C** Drill a hole in the wall 775 mm above the diverter and fit the wall bracket. If the pipe has to be cut, deburr the end of the pipe and adjust the length so that the hole is level with the joint between the long pipe and the spray head pipe.
- NOTE:** Seal with silicone sealant.
- D** Press in the expansion coupling, hold it in place and tighten with an 8 mm Allen key [1]. Slide on the slider [2]. Tighten the knob on the slider to check its position when locked. If it points downwards, reverse the slider. Slide on the wall mounting [3]. Screw the spray head pipe into place [4]. Fix the pipe to the wall bracket [5].
- E** Fit the upper pipe into the diverter [1]. Fix with locking screw [2]. Fit the knob [3] to the diverter.

There may be a slow drip. To reduce dripping after showering, leave the diverter in the midway position (45°).

**Products can be returned to Mora Armatur for recycling at the end of their life.**