


1. Locate Mist APs shipped for installation, they look like this:



2. Two APs are NOT interchangeable. One is configured as MIST BASE, the other is MIST RELAY



3. Replace existing Extreme AP with Mist marked MIST BASE; Use existing cables. Plug the cable into Mist AP port Eth1+PoE.

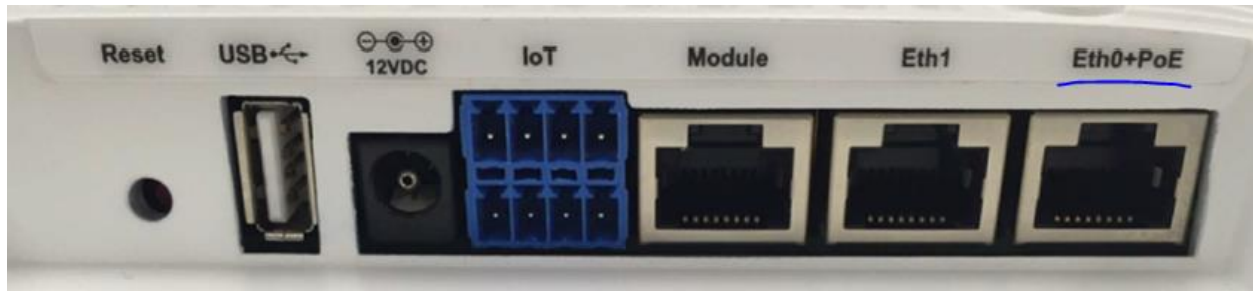

4. Wait for the light on the AP to turn solid blue (AP is connected to the Mist cloud, and has mobile clients connected to it)
5. Confirm with RX PIC that pickup terminals, and Ironman are functioning;
6. Bring Mist marked MIST RELAY, and power injector to the second CVS site inside Target (MC, Test or Immunization location)
7. Plug Ethernet cable into Eth1+PoE port on the MIST RELAY, and Data+Power OUT port on power injector. Plug power injector into the power outlet. Wait for the AP light to become solid, one the three colors: grey, green or blue

- AP connected to the cloud
- AP configured by the cloud
- At least one wireless client connected
- AP connection

8. Techs call into ROC to report any issues, or at the end of installation to confirm that it is complete;
9. After installation is complete, ROC will access Mist portal to confirm that the site has Mesh enabled, and has Base AP and a Repeater connected.
10. Issues that cannot be resolved by installation tech, or ROC will be escalated to STS.